

BlueSpark Series

Residential All-In-One Energy Storage System

E3.68-6KS-D22 Inverter

(E3.658KS-D22 | E5KS-D22 | E6KS-D22)

Battery Pack 5.1kWh

(BP48100PF1A-G2)



KSTAR Sync APP



Quick Installation Guide (Global)

Copyright @ Shenzhen Kstar New Energy Co., Ltd. 2026. All rights reserved.


(2026061Ver:1.2)

1. Safety Instructions


- The information in this quick installation guide is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.
- All operations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Strictly follow the installation, operation, and configuration instructions in this guide and user manual. The manufacturer shall not be liable for equipment damage or personal injury if you do not follow the instructions.

2 Scope of Delivery


Hybrid Inverter

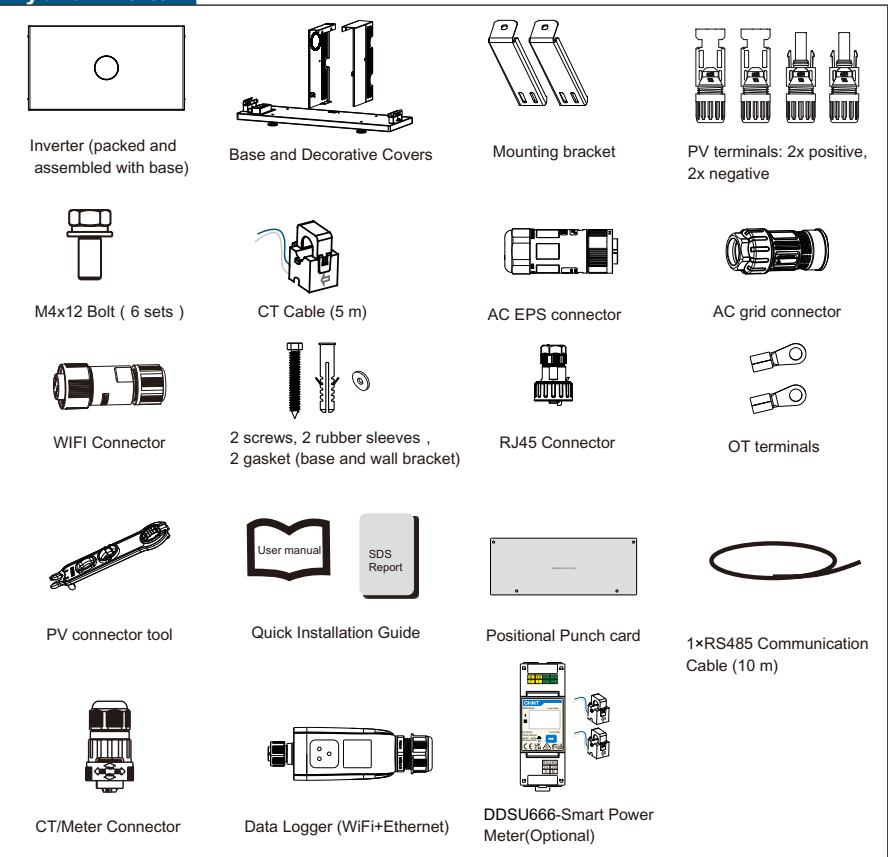


Battery pack Components

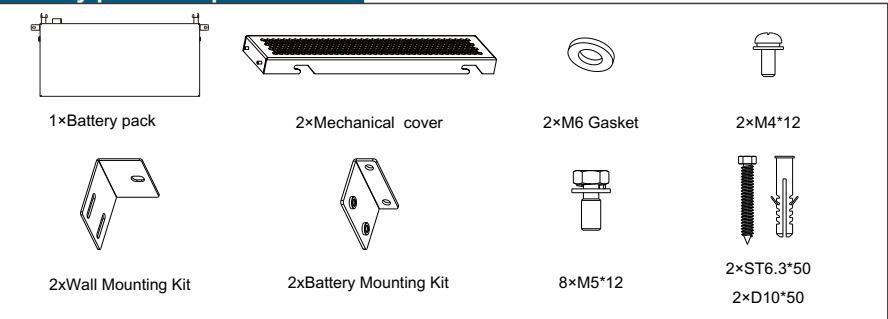

Mounting Location & Clearances

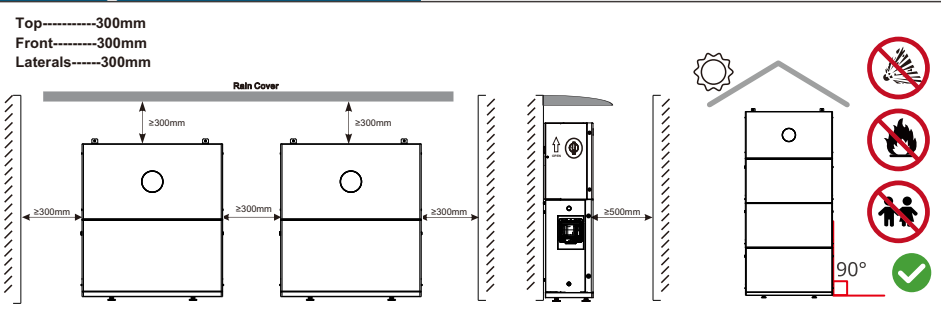


Installation Tools & Required Cables

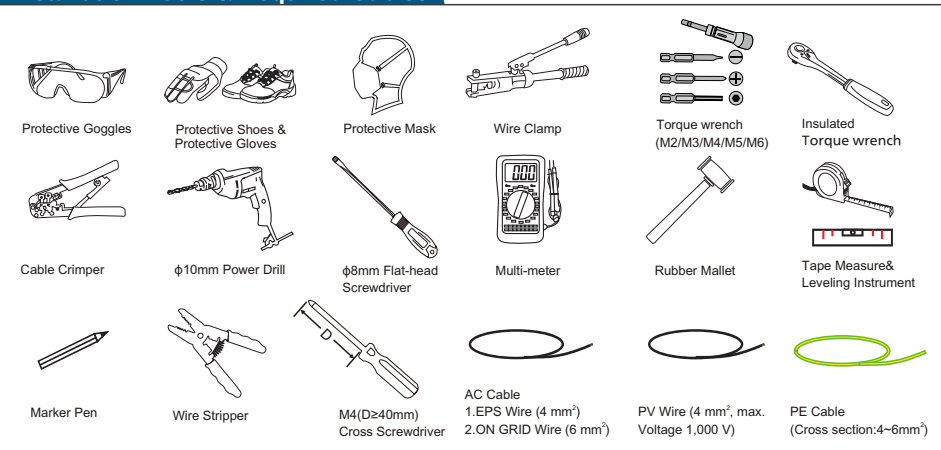


3 Mechanical Installation




Handling of Equipment

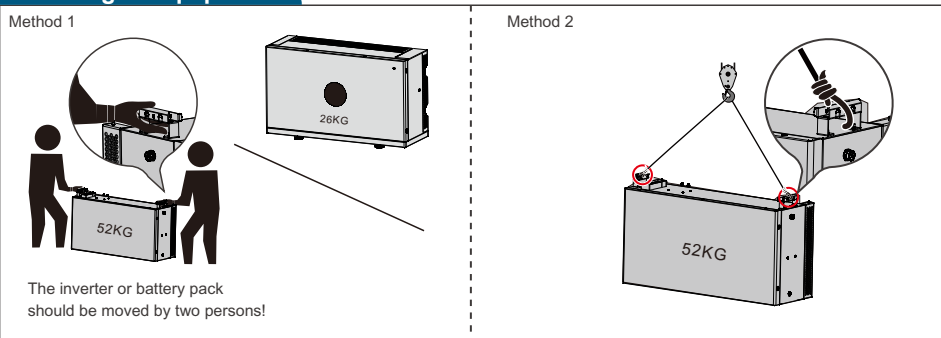


Remove the Base and Covers

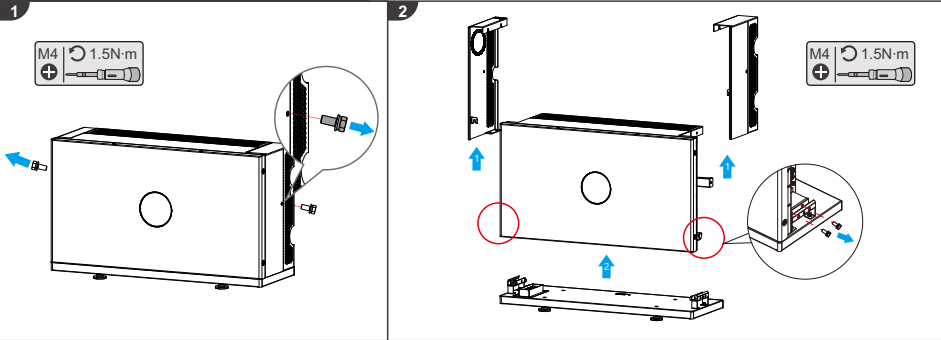

Install the Battery Pack

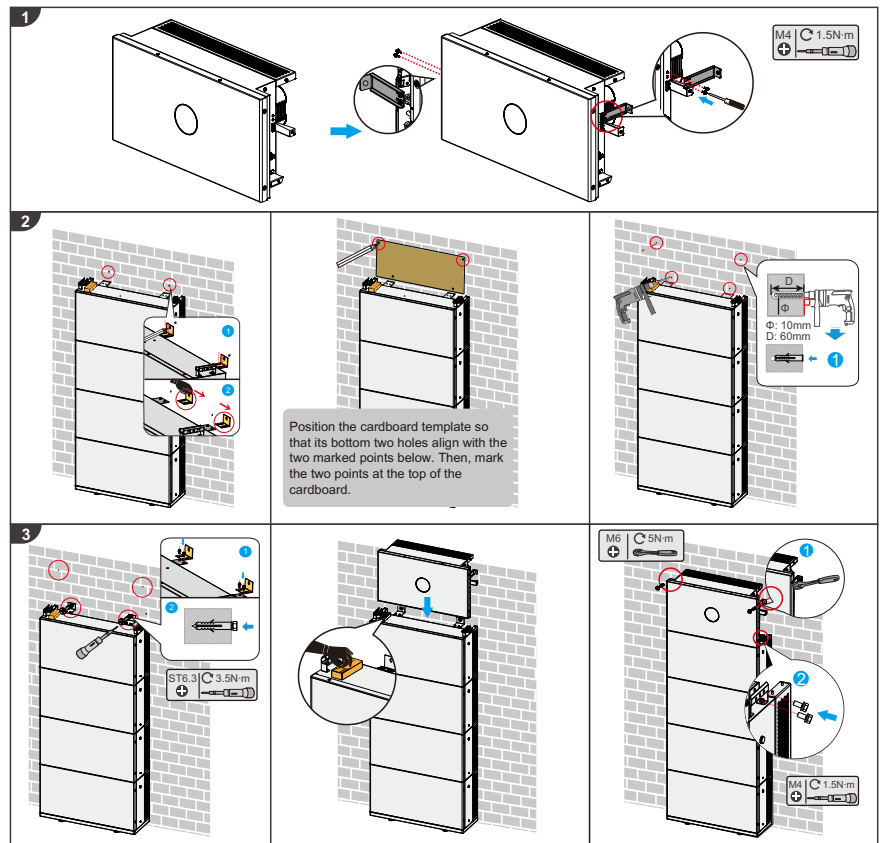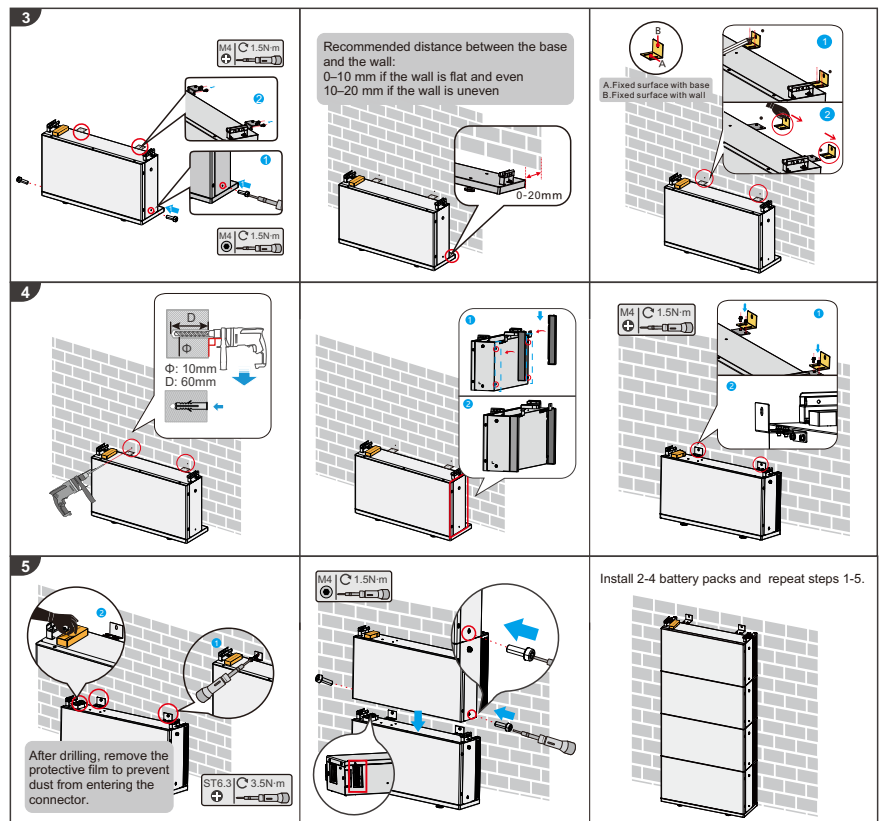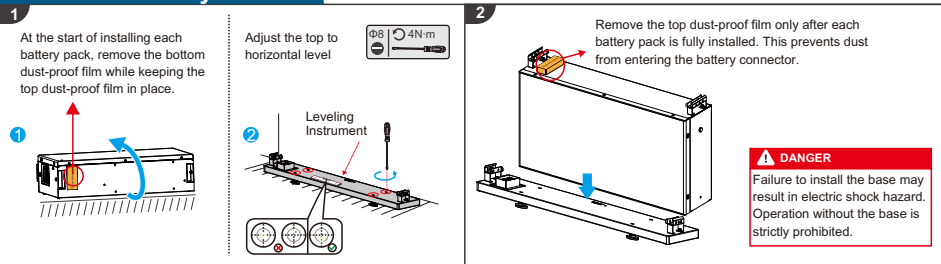


Electrical Connection

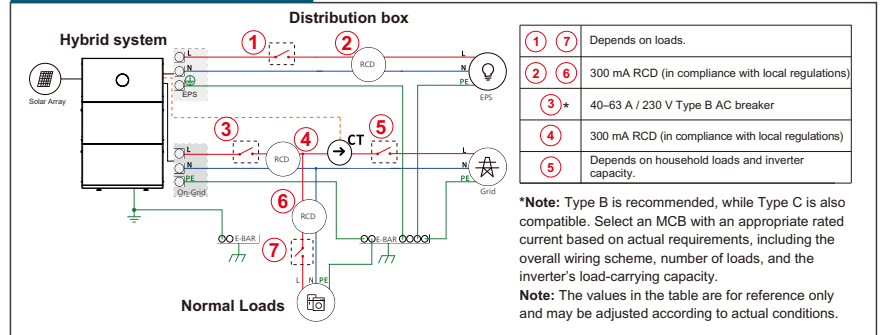


Expansion Base (Optional)


NOTE:
When 5 to 8 battery packs are used, the following additional accessories must be installed as a set.
The unlocking tool is used for connector release operations.

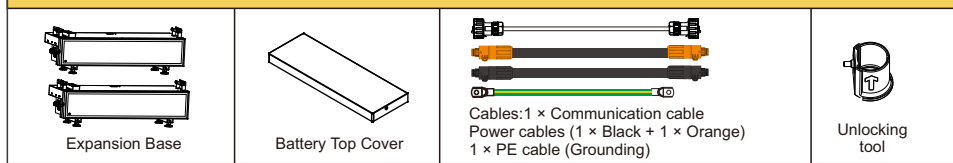



Dual-tower Installation (Optional)

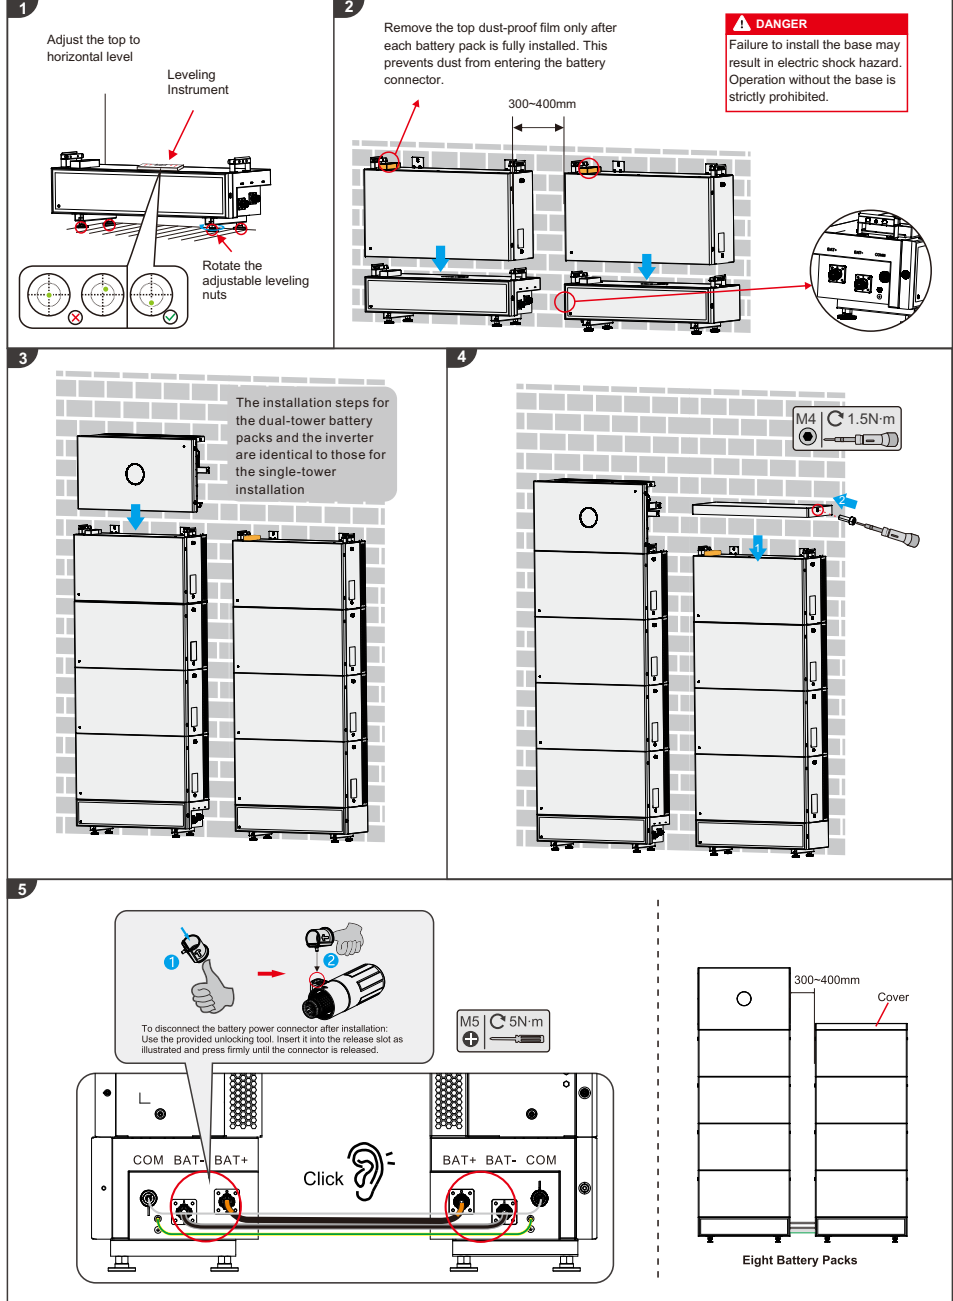


PE Cable Connection

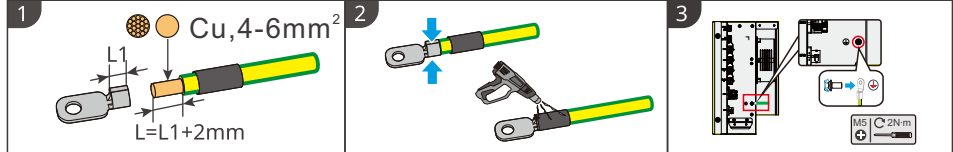


AC Connection (Grid & EPS)

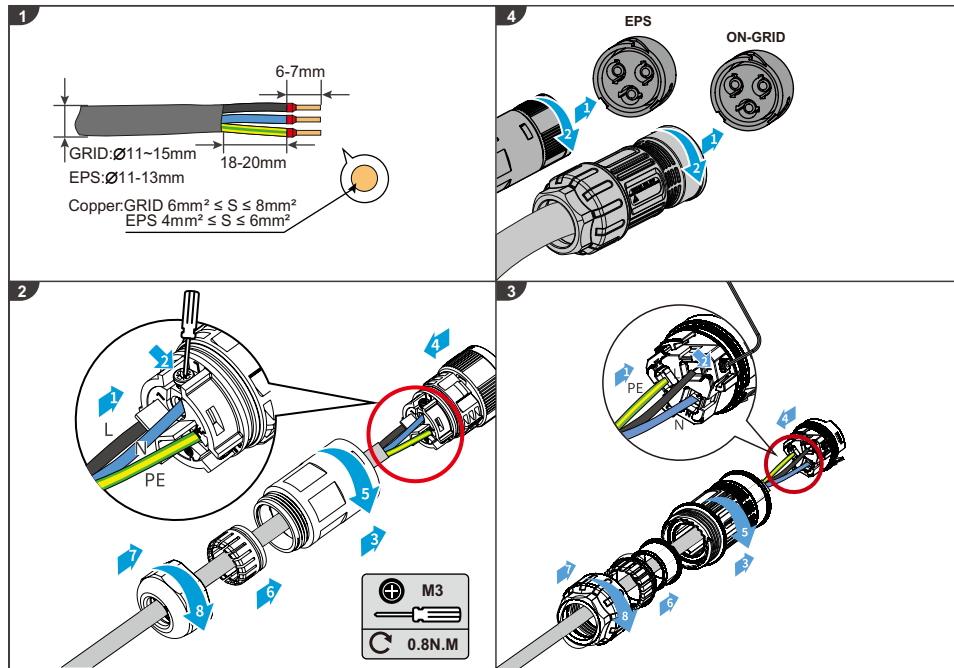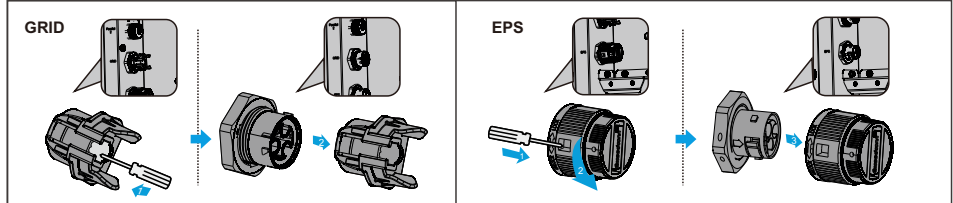


DC (MPPT) Connection

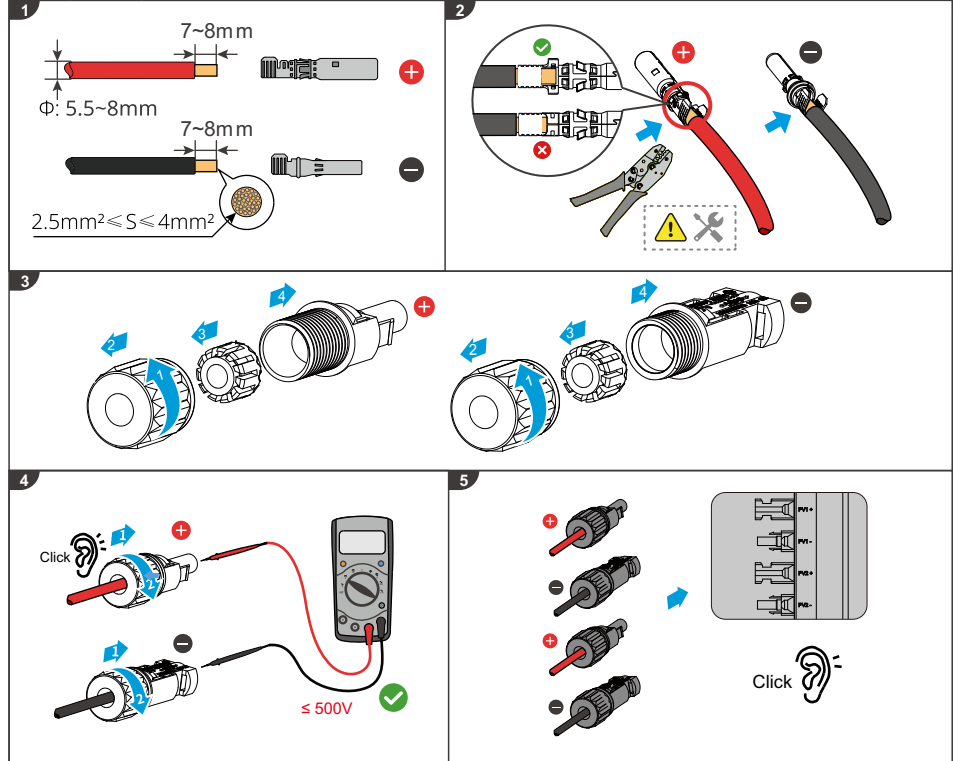


Data Logger and CT/Meter Connection

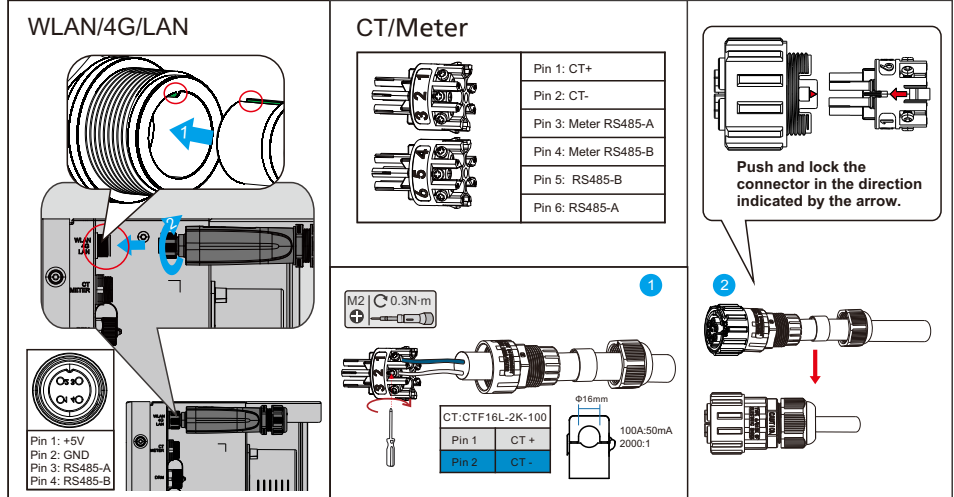


DRM (RRCR) Connection

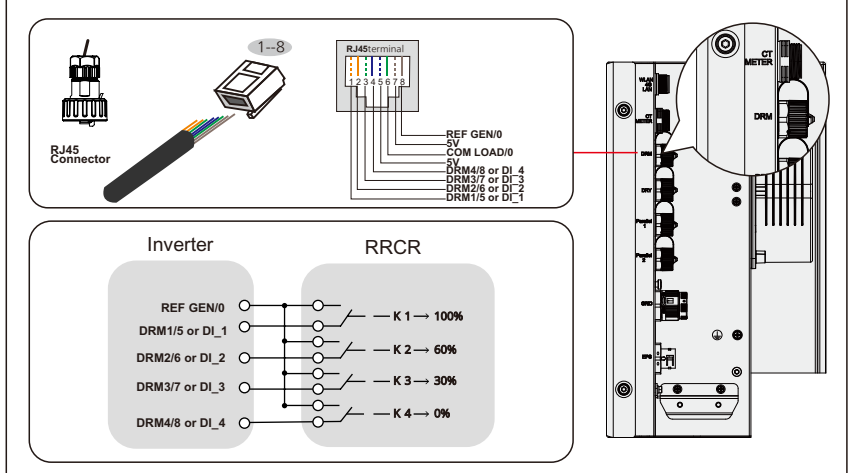

Install Protective Covers

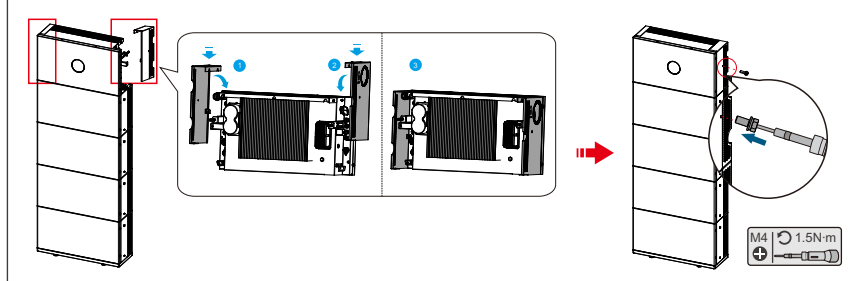

Power ON and OFF Sequence

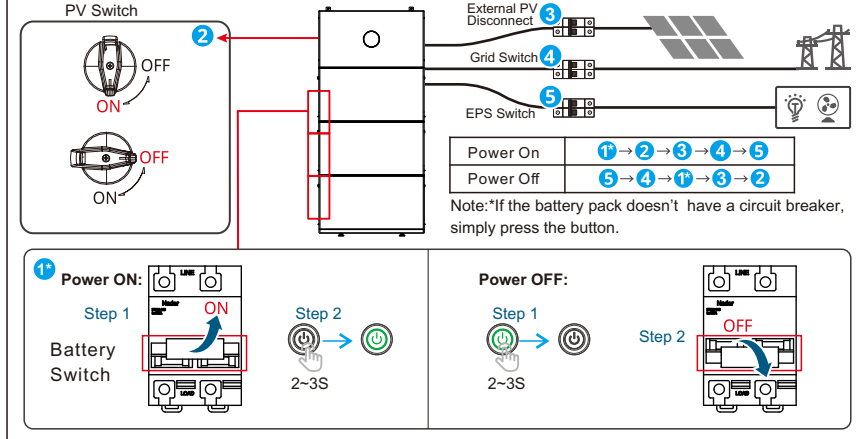

LED Indicator Status

Icons	Implication	Color	Status	Description
	PV Indicator	Green	On	PV operating normally
			Flashing	PV connected but not operating
			Off	PV not connected
	Communication Indicator	Green	On	Monitoring backend connected and communication normal
			Off	Monitoring module not connected or communication abnormal
			On	System in On-grid operation mode
	Grid Indicator	Green	Flashing	System in by pass mode
			Off	System in initialization, standby, off-grid, fault, commissioning, or upgrade mode
			On	System in off-grid PV charging mode
	OFF-Grid Indicator	Green	On	System in off-grid PV charging mode
			Off	PV off-grid charging not in progress
			On	System fault
	Fault Indicator	Red	Off	System fault
			On	Battery operating normally
			Flashing	Battery abnormal (alarm or BMS communication abnormal)
	Battery Indicator	Green	Off	Battery shutdown or battery disconnected
			On	Battery operating normally
			Flashing	Battery abnormal (alarm or BMS communication abnormal)
	Battery SOC Indicator (Flashing during charging)	Green	On	Battery operating normally
			Flashing	Battery abnormal (alarm or BMS communication abnormal)
			Off	Battery shutdown or battery disconnected